

Steps to put on personal protective equipment (PPE) for Ebola/Marburg disease: Coverall

Always put on PPE under the supervision of a trained buddy. Do not use tape to secure PPE in place.

1. Remove all personal items.




2. Put on scrubs and rubber boots¹. Tie hair back.



3. Select correct size of PPE. Do not use if damaged or expired.

4. Perform hand hygiene with ABHR or soap and water.

5. Put on the inner pair of gloves.

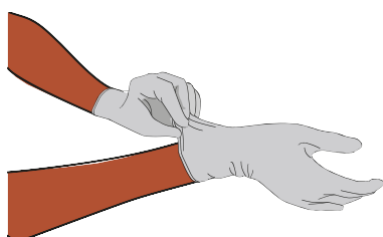

6. Put on coverall.




Use finger/thumb loop if present.

7. Put on non-collapsible medical mask.

Use seal-checked respirator if performing aerosol generating procedures.



8. Put on face shield OR goggles.

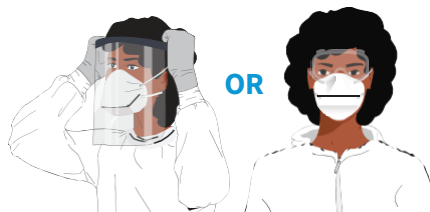

9. Pull the hood of the coverall over the head.



10. Put on disposable or reusable waterproof apron.

For hygienists, cleaners, waste handlers and safe and dignified burial teams, use heavy duty apron.



11. Put on second pair of gloves over the cuff. For hygienists, cleaners, waste handlers and safe and dignified burial teams, use heavy duty gloves.



12. Ensure buddy check and name and time of entry are put on PPE.

Name _____
Time _____



¹ If boots are not available, use slip on shoes (no laces) that cover the ankle and the top of the foot